


INSTRUCTIONS FOR FASTENING THE PANEL AND FOLLOW-UP OF THE DIMENSIONS

FACADE CLADDINGS / CLADDING LAMELLAS LAMELLA COR-TEN 30

RUKKI

FASTENING OF THE LAMELLA

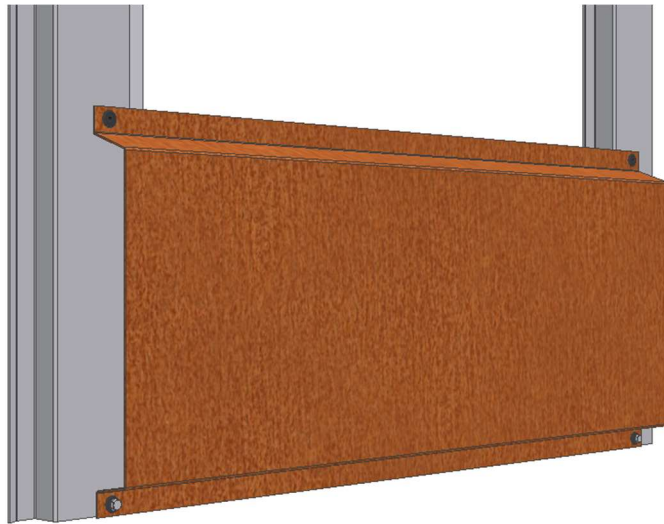

1. Add EPDM grommets to the upper and lower edges of the lamella. Add fasteners to the lower edge of the lamella, the joint should be at the center of the stud.



3. Install the next row as shown in the picture.

Recommended fasteners:

- For fastening to support stud (e.g. CA1SS4), use screws S3H60029D03S6B

The flanges must be separated from each other by EPDM grommets CA3SP814.

Vertical joint flashings can be used between the lamellas.

Final execution must be according to the structural designer's instructions!



2. Continue with the first row of lamellas, leave a 2-3 mm vertical gap between them.

FOLLOW-UP OF THE DIMENSIONS

Follow the effective height. Check the dimensions from the plans!

Lamella tolerances:

- Effective height: ± 2 mm
- Width: ± 2 mm

Sub frame tolerances in horizontal direction:

- For one lamella: ± 1 mm
- Between each support stud: ± 1 mm

